



ASSEMBLY INSTRUCTIONS

WL Series
Workbench stool
AAP-CS616

Read these instructions before starting; follow assembly procedures carefully.

1. Install casters ① into each of the legs of the base ②.
Be sure each caster is completely inserted into leg for proper stability.
2. Insert the lift assembly ③ into base with tapered-end down. Secure lift assembly by applying a little downward pressure. Remove yellow plastic cap from top of lift assembly. **DO NOT PUSH ON BUTTON AT THE TOP!**
3. Install seat control assembly ④ by aligning hole on the control with the shaft of lift assembly. Push down firmly on seat. Handle on control can be pulled up to raise and lower seat. When sitting on seat, pull up on handle to lower seat. To raise seat, remove weight from seat and pull up on handle.
4. Slide backstem bellows ⑤ over lower backstem ⑥. Flat portion of bellows must be positioned towards back of backrest ⑦.
5. Slide lower backstem into slot at back of control assembly. Slide backstem until push button locks in control. If needed, loosen knob to allow backstem to be fully inserted into control. Tighten knob to secure backstem.
6. Slide upper backstem with backrest ⑦ into lower backstem. Tighten knob to secure backrest in place.

GENERAL SAFETY INSTRUCTIONS

1. **DO NOT STAND ON THIS STOOL. DO NOT USE STOOL AS A STEP LADDER.**
2. Use this product only for seating one person at a time.
3. Do not use this stool unless all screws are firmly secured.
4. At least every 4 months, check all screws are firmly secured.
5. If parts are missing, damaged, broken or worn, stop use of this product until repairs are made using factory authorized parts.
6. This stool is designed and intended for users up to 300 lbs. Use by users above 300 lbs. is not recommended since it could weaken the stool construction and potentially cause injury.
7. **FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.**
8. Warranty may be void if stool is used while damaged. Immediately call 1-800-733-4000 and report any problems.

MAINTENANCE

Pneumatic lift in lift assembly is permanently lubricated at factory and needs no further lubrication. Never lubricate pneumatic lift.

Do not remove clip from bottom of lift assembly. Contact 1-800-733-4000 immediately if clip is missing or damaged.



